

ELT 406 Operating Instructions

The switch for the new 406 MHz ELT is on the front panel near the clock. It is a two-position rocker, with an ON and an ARM setting. It also has a dual-color LED facing the pilot and a buzzer located inside the switch assembly.

The rocker is normally in the ARM position with the LED unlit.

If you want to manually activate the ELT, move the switch to the ON position. The rescue system will be notified 50 seconds later. If the emergency passes and you want to stop transmitting, move the rocker back to ARM.

Should the green LED come on and you haven't moved the switch to ON, then the G sensor has activated the ELT (the buzzer will also sound in this case, but you may not hear it over the engine noise). If you don't want to send this distress signal then move the switch to ON for five seconds, and then back to ARM.